

4.2 Conditions for the IS-Area

Danger generated by electrostatic charging

	Danger of death from explosion <ul style="list-style-type: none"> - Explosion hazard due to spark formation from electrostatic charging of plastic components. - For devices with cable outlet, the cable must be installed tightly. - Do not clean the device and, if applicable, the connection cable, in a dry state! Use a moist cloth, for example.
--	--

The following warning sign is affixed on devices with plastic components.

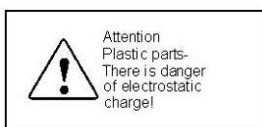


Fig. 2: Warning sign

NOTE - The warning sign must not be removed from the device!

Particularity for TRIM TRIO® connector (code 5T2)

For devices with TRIM TRIO® connector by SOURIAU, the use in explosion-hazardous areas is restricted. This design type can be identified by the code "5T2" in the "Electrical Connection" segment of the order code. The identification on the type plate of the device as well as the order documents provide information on the approved areas of application.

Overvoltage protection

If the pressure transmitter is used as electrical equipment of category 1 G, then a suitable overvoltage protection device must be connected in series (attend the valid regulations for operating safety as well as EN60079-14).

Schematic circuit

The operation of an intrinsically safe transmitter in intrinsic safe areas requires special care when selecting the necessary Zener barrier or transmitter repeater devices to allow the utilization of the device's properties to the full extent. The following diagram shows a typical arrangement of power supply, Zener barrier and transmitter.

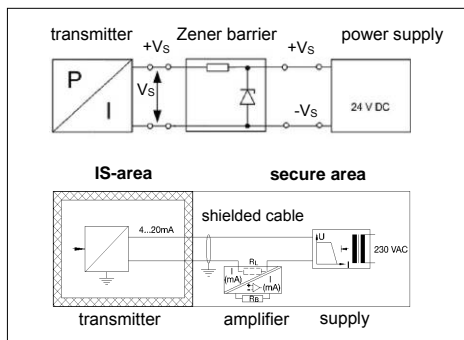


Fig. 3 circuit diagrams

NOTE - Observe item (17) of the type-examination certificate which specifies special conditions for intrinsically safe operation.

Exemplary circuit description

The supply voltage of e.g. 24 V_{DC} provided by the power supply is led across the Zener barrier. The Zener barrier contains series resistances and breakdown diodes as protective components. Subsequently, the operating voltage is applied to the transmitter and, depending on the pressure, a particular signal current flows.

	Danger of death from explosion <ul style="list-style-type: none"> - Operation of intrinsically safe devices as zone-0 equipment only with ungrounded and galvanically isolated power supply.
--	--

Functional selection criteria for Zener barriers and galvanic power supply

The minimum supply voltage V_{S min} of the transmitter must not fall short since a correct function of the device can otherwise not be guaranteed. The minimum supply voltage has been defined in the respective product-specific data sheet under "Output signal / supply".

When using a galvanically insulated amplifier with linear bonding, note that the terminal voltage of the transmitter will decrease like it does with a Zener barrier. Furthermore, you have to note that the supply will additionally decrease with an optionally used signal amplifier.

Test criteria for the selection of the Zener barrier

In order not to fall below V_{S min}, it is important to verify which minimum supply voltage is available at full level control of the transmitter. The full level control, i.e. a maximum or nominal output signal (20 mA), can be reached by applying the maximum physical input signal (pressure).

The technical data of the barrier will usually provide the information needed for the selection of the Zener barrier. However, the value can also be calculated. If a maximum signal current of 0.02 A is assumed, then – according to Ohm's law – a particular voltage drop will result from the series resistance of the Zener barrier.

This voltage drop is subtracted by the voltage of the power supply and as a result, the terminal voltage is obtained which is applied on the transmitter at full level control. If this voltage is smaller than the minimum supply voltage, another barrier or a higher supply voltage should be chosen.

NOTE - When selecting the ballasts, the maximum operating conditions according to the EC type-examination certificate must be observed. When assessing these, refer to their current data sheets to ensure that the entire interconnection of intrinsically safe components remains intrinsically safe.

Calculation example for the selection of the Zener barrier

The nominal voltage of the power supply in front of the Zener barrier is 24 V_{DC} ± 5%. This results in:

$$V_{\text{Sup max}} = 24 \text{ V} * 1.05 = 25.2 \text{ V}$$

$$V_{\text{Sup min}} = 24 \text{ V} * 0.95 = 22.8 \text{ V}$$

The series resistance of the Zener barrier is listed with 295 ohm. The following values must still be calculated:

$$V_{\text{ab barrier}} = 295 \Omega * 0.02 \text{ A} = 5.9 \text{ V}$$

$$V_{\text{KI}} = V_{\text{S up min}} - V_{\text{ab Barriere}} = 22.8 \text{ V} - 5.9 \text{ V} = 16.9 \text{ V}$$

$$V_{\text{KI min}} = 12 \text{ V}_{\text{DC}} \text{ (corresponding to } V_{\text{S min}})$$

Condition:

$$V_{\text{KI}} \geq V_{\text{KI min}}$$

Result:

The terminal voltage of the transmitter with Zener barrier lies at 16.9 V and is therefore higher than the minimum supply voltage of the transmitter which lies at 12 V_{DC}. This means, the Zener barrier has been selected correctly regarding the supply voltage.

NOTE - Note that no line resistances have been listed in this calculation. However, these will lead to an additional voltage drop that must be taken into account.

4.3 Electrical Installation

Establish the electrical connection of the device according to the technical data shown on the manufacturing label, the following table and the wiring diagram.

Pin configuration:

Electrical connections	ISO 4400	Binder 723 (5-pin)	M12x1 (4-pin)
Supply +	1	3	1
Supply -	2	4	2
Shield	ground contact	5	4

Electrical connections	Buccaneer (4-pin)	TRIM TRIO® (4-pin)
Supply +	1	1
Supply -	2	2
Shield	4	4

Electrical connections	Bayonet MIL-C-26482 (10-6)
Supply +	A
Supply -	B
Shield	pressure port

Electrical connections	Field housing	Cable colours (IEC 60757)
Supply +	IN +	wh (white)
Supply -	IN -	bn (brown)
Shield		gnye (green-yellow)

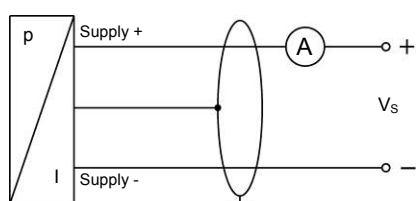


Fig. 4: Wiring diagram

NOTE - For a clear identification, the intrinsically safe cables are marked with light blue shrink tubing (over the cable insulation). If the cable has to be modified (e.g. shortened) and the marking at the cable end has been lost in the process, it must be restored (for example, by marking it again with light blue shrink tubing or an appropriate identification sign).

NOTE - In the case of relative pressure gauges, the cable contains a ventilation tube for pressure equalization. Route the end of the cable into an area or suitable connection box which is as dry as possible and free from aggressive gases, in order to prevent any damage.

5. Commissioning

	Danger of death from explosion <ul style="list-style-type: none"> - Explosion hazard if the operating voltage is too high (max. 28 V_{DC})! - Operate the device only within the specification! (according to data sheet)
--	--

- ✓ The device has been installed properly.
- ✓ The device does not have any visible defect.
- ✓ The device is operated within the specification. (see data sheet and EC-type examination certificate)

In case of highly precise devices with an accuracy of 0.1 % FSO, a microcontroller-controlled electronic system is used for signal processing. This electronic system is used for signal improvement. Due to the principle, the processing of measured values requires a longer time than with purely analogue sensors, which only comprise amplification circuitry. Due to the longer processing time, the output signal follows the measured value not continuously but in jumps. In case of relatively stable and slowly changing measured values, this property plays a minor role. Compare this with the information on the adjusting time in the data sheet.

In the case of i-devices with optional communication interfaces can also be configured by these electronics. Offset, span and damping are programmable within the limits given in the data sheet. For configuring the device, the programming kit CIS 510 consisting of Adapt 1, Windows® compatible programming software P-Scale 510, power supply and connecting cable is necessary. This can be ordered additionally from BD SENSORS.

6. Maintenance

	Danger of death <ul style="list-style-type: none"> - from airborne parts, leaking fluids, electric shock - Always service the device in a depressurized and de-energized condition!
	Danger of injury from aggressive fluids or pollutants <ul style="list-style-type: none"> - Depending on the measured medium, this may constitute a danger to the operator. - Wear suitable protective clothing e.g. gloves, safety goggles.

In principle, this device is maintenance-free. If desired, the housing of the device can be cleaned using a damp cloth and non-aggressive cleaning solutions.

Deposits or contamination may occur on the diaphragm in case of certain fluids. It is recommended to establish appropriate maintenance intervals for checking purposes.

Cleaning of the diaphragm: Clean the diaphragm cautiously using a non-aggressive cleaning solution and a soft paintbrush or sponge. If the diaphragm is calcified, it is recommended to have the decalcification performed by BD|SENSORS. Please note the chapter "Service/Repair" with regard to this.

NOTE - A false cleaning can cause an irreparable damage on the diaphragm. Therefore never use pointed objects or pressured air for cleaning the diaphragm.

7. Troubleshooting

	Danger of death <ul style="list-style-type: none"> - from airborne parts, leaking fluids, electric shock - If malfunctions cannot be resolved, put the device out of service (proceed according to chapter 8 up to 10)
	Danger of death from explosion <ul style="list-style-type: none"> - As a matter of principle, work on energized parts, except for intrinsically safe circuits, is prohibited while there is an explosion hazard.

In case of malfunction, it must be checked whether the device has been correctly installed mechanically and electrically. Use the following table to analyse the cause and resolve the malfunction, if possible.

Fault: no output signal	Possible cause	Fault detection / remedy
Connected incorrectly		Checking of connections
Conductor/wire breakage		Checking of all line connections.
Defective measuring device (signal input)		Checking of ammeter (miniature fuse) or of analogue input of your signal processing unit

Fault: analogue output signal too low	Possible cause	Fault detection / remedy
Load resistance too high		Checking of load resistance (value)
Supply voltage too low		Checking of power supply output voltage
Defective energy supply		Checking of the power supply and the supply voltage being applied to the device

Fault: slight shift of the output signal	Possible cause	Fault detection / remedy
Diaphragm of sensor is severely contaminated		Cleaning using a non-aggressive cleaning solution and soft paintbrush or sponge
Diaphragm of sensor is calcified or crusted		Recommendation: Have the decalcification or cleaning performed by BD SENSORS

Fault: large shift of the output signal	Possible cause	Fault detection / remedy
Diaphragm of sensor is damaged (caused by overpressure or mechanically)		Checking of diaphragm; when damaged, send the device to BD SENSORS for repair

Fault: wrong or no output signal	Possible cause	Fault detection / remedy
Cable damaged mechanically, thermally or chemically		Checking of cable; pitting corrosion on the stainless-steel housing as a result of damage on cable; when damaged, send the device to BD SENSORS for repair

8. Removal from Service

	Danger of death <ul style="list-style-type: none"> - from airborne parts, leaking fluids, electric shock - Disassemble the device in a depressurized and de-energized condition!
	Danger of injury from aggressive media or pollutants <ul style="list-style-type: none"> - Depending on the measured medium, this may constitute a danger to the operator. - Wear suitable protective clothing e.g. gloves, goggles.

NOTE - After dismounting, mechanical connections must be fitted with protective caps.

9. Service/Repair

Information on service / repair:

- www.bdsensors.com
- info@bdsensors.de
- Service phone: +49 (0) 92 35 98 11 0

9.1 Recalibration

During the life-time of a transmitter, the value of offset and span may shift. As a consequence, a deviating signal value in reference to the nominal pressure range starting point or end point may be transmitted. If one of these two phenomena occurs after prolonged use, a recalibration is recommended to ensure furthermore high accuracy

9.2 Return

	Danger of injury from aggressive media or pollutants <ul style="list-style-type: none"> - Depending on the measured medium, this may constitute a danger to the operator. - Wear suitable protective clothing e.g. gloves, goggles.
--	--

Before every return of your device, whether for recalibration, decalcification, modifications or repair, it has to be cleaned carefully and packed shatter-proofed. You have to enclose a notice of return with detailed defect description when sending the device. If your device came in contact with harmful substances, a declaration of decontamination is additionally required.

Appropriate forms can be downloaded from our homepage. Download these by accessing www.bdsensors.com or request them:

info@bdsensors.de | phone: +49 (0) 92 35 / 98 11 0

In case of doubt regarding the fluid used, devices without a declaration of decontamination will only be examined after receipt of an appropriate declaration!

10. Disposal

	Danger of injury from aggressive media or pollutants <ul style="list-style-type: none"> - Depending on the measured medium, this may constitute a danger to the operator. - Wear suitable protective clothing e.g. gloves, goggles.
--	--

The device must be disposed of according to the European Directive 2012/19/EU (waste electrical and electronic equipment). Waste equipment must not be disposed of in household waste!

NOTE - Dispose of the device properly!

11. Warranty Terms

The warranty terms are subject to the legal warranty period of 24 months, valid from the date of delivery. If the device is used improperly, modified or damaged, we will rule out any warranty claim. A damaged diaphragm will not be accepted as a warranty case. Likewise, there shall be no entitlement to services or parts provided under warranty if the defects have arisen due to normal wear and tear.

12. EU Declaration of conformity / CE

The delivered device fulfils all legal requirements. The applied directives, harmonised standards and documents are listed in the EC declaration of conformity, which is available online at: <http://www.bdsensors.com>. Additionally, the operational safety is confirmed by the CE sign on the manufacturing label.

DX14-....:



DX19-....:

